

# INSTRUCTION SHEET

16200076

**Description:** Main Control Board Kit 59004110

**Contents:** 1 – Control Board  
1 – Instruction Sheet

## Procedure:

This kit replaces the original equipment on several models.  
The application on some models may require reprogramming after installation.  
Refer to the chart on page 2 for model specific instructions.

OC24BK P2000302M Direct replacement  
OC5241BK P2000304M Direct replacement  
OC524T1BK P2000308M Requires reprogramming  
OC5241HJ P2000309M Requires reprogramming

Instructions for reprogramming COOK TIMES on the models shown:

1. Press and hold pad 1 for approximately 5 seconds.
  2. Press pad to be reprogrammed.
  3. Enter cooking time by using the number pads.
  4. Press POWER LEVEL pad to program level of microwave power if desired.
    - For a lower microwave power, press pads 1 (for 10%), through 9 (for 90%), or 0 for no microwave energy.
- NOTE: Press POWER LEVEL pad twice to return to 100% microwave power.
5. Press TIME ENTRY pad to add up to four additional cooking stages.
    - Maximum cooking time cannot exceed 10 minutes per user options.
    - Total cooking time factory setting is 5 minutes.
    - Enter cook time and power level as in steps 4 and 5.
  6. Press START pad to set new programming changes to the pad.

NOTE: To discard changes, press STOP pad or close oven door.
  7. Press STOP to exit programming mode.

**OC524T1BK P2000308M**

KEYPAD	STAGE 1	
	TIME	POWER LEVEL
1	0:04	100%
2	0:06	100%
3	0:09	100%
4	0:40	100%
5	0:20	100%
6	0:30	100%
7	0:50	90%
8	0	0
9	0	0
0	0	0

**OC5241HJ P2000309M**

KEYPAD	STAGE 1	
	TIME	POWER LEVEL
1	0:04	100%
2	0:06	100%
3	0:08	100%
4	0:12	100%
5	0:17	100%
6	0:30	100%
7	0	0
8	0	0
9	0	0
0	0	0