

INSTRUCTION SHEET

16200075

Description: HV/ LV Board Kit # 14114047

Contents: 1 – HV / LV Board
1 – Instruction Sheet

Procedure:

This kit replaces the original equipment HV / LV board on several models.

The application on some models may require modified installation and / or reprogramming after installation.

Refer to the chart below for model specific instructions.

RFS12MPSB P1330235M Requires modified installation and reprogramming
- see instructions A and B

RFS12SW2B P1330236M Requires modified installation- see instruction B

RFS12SW2C P1330237M Requires modified installation- see instruction B

RFS12TS P2001002M Requires reprogramming- see instructions A

RFS12TSW P2001001M Direct replacement

Instruction A- Reprogramming

1. Open oven door.
 - READY displays.
 - If door is closed or STOP/RESET pad is pressed before programming is complete, changes are discarded and microwave exits programming mode.
2. Press and hold pad 1 for approximately 5 seconds.
 - This begins programming mode.
 - Microwave will beep and PROGRAM displays. Oven is in programming mode.
3. Press pad to be reprogrammed.
 - Press two pads if reprogramming a double pad program.
 - Power level and cooking time display.
 - If power level does not display, microwave is set to full power.
4. Enter cooking time by using the number pads.
5. Press a power level pad to change power level if desired.
6. Enter cook time and power level as in steps 4 and 5 (some models)
 - To enter another cooking stage for that pad, press TIME ENTRY pad again.
 - Up to four different stages can be programmed (some models).
7. Press START pad to set new programming changes to the pad.
 - PROGRAM displays.
 - If START is not pressed, changes will not be saved.
8. Press STOP/RESET pad or close oven door to exit programming mode.

RFS12MPSB RFS12TS

Keypad	Time	Power Level
1	0:10	100%
2	0:20	100%
3	0:30	100%
4	0:45	100%
5	1:00	100%
6	1:30	100%
7	2:00	100%
8	3:00	100%
9	4:00	100%
0	5:00	100%

Instruction B - Installation

1. Disconnect power from unit.
2. Remove wrapper from unit.
3. Remove escutcheon / touch panel from oven.
4. Disconnect wire connectors and touch panel ribbon connector from existing HV/LV board.
5. Remove HV/LV board.
6. Install HV/LV board from kit in escutcheon / touch panel.
7. Plug wire connectors onto board connections shown below (Figure 1).
8. Connect HV/LV board ground wire to control panel mounting screw.

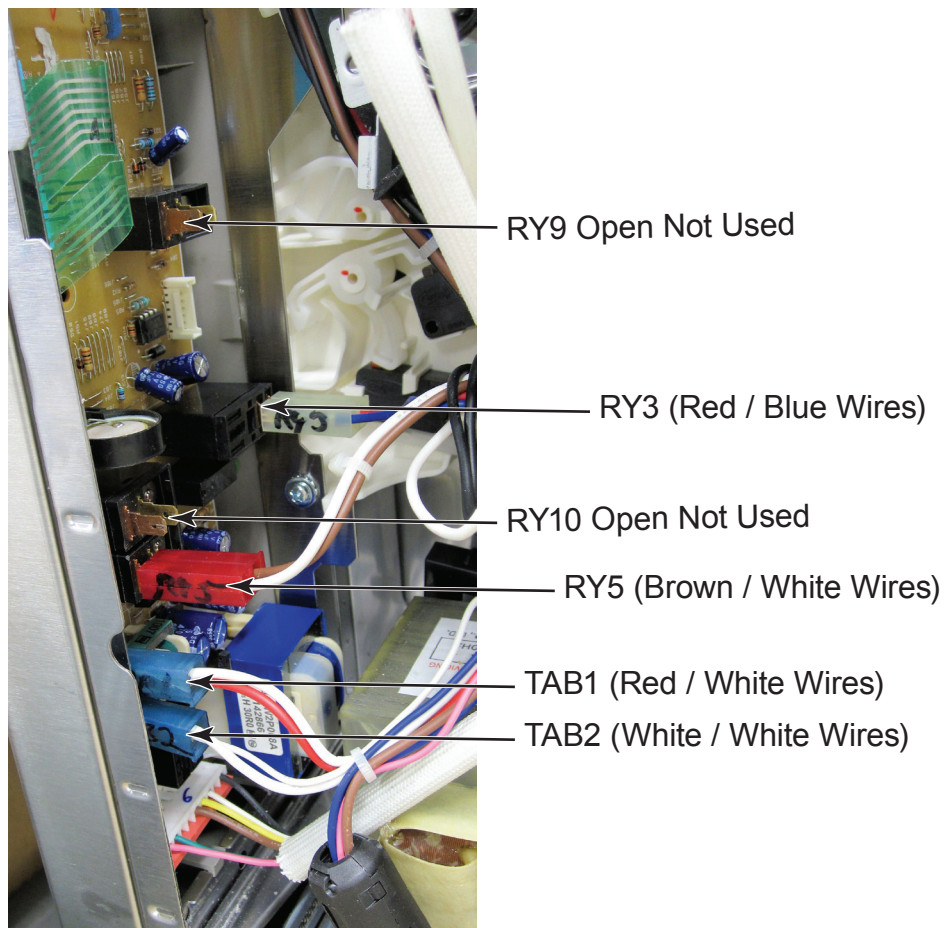


Figure 1