

INSTRUCTION SHEET

16200072

Description: EZ10

Kit Contents: 1 – 13044901 EZ Card
1 – 16200072 Instruction Sheet

HDC / MDC / CRC EZ Card Instructions

1. Locate the EZ Card plug cover on left side of oven and insert the EZ Card.
2. **Open** the oven door.
3. Press and hold **the 5 pad** for 4-5 seconds display will read "EZ-CARD".
4. To transfer programming **FROM** the EZ Card to the oven, press the **1 pad**. Display will read "FROM EZ-CARD".

OR

To transfer programming **TO** the EZ Card from the oven, press the **2 pad**. Display will read "TO EZ-CARD".

5. Press **START pad**, to begin transfer.
6. The microwave will beep and segments around the perimeter of the display will light up as the transfer takes place.
7. When the transfer is complete the display will read "DONE".
8. Press any pad to clear the display or shut the door and the display will read "READY".

Error Codes:

1. If the display reads "EZ-CARD NOT PRESENT", the EZ Card is not properly inserted.
2. If the display reads "WRONG CARD", the oven ID is not compatible with the EZ Card that has been inserted.
3. If the display reads "CARD LOCKED" the EZ Card has been locked so no new programming can be transferred or overwritten.

ACE / DS / MCE / UCA EZ Card Instructions

To program the oven using the EZ Card:

Oven must be in Standby mode (Preheat must be OFF)

1. Remove plug cover from bottom of vertical keypad.
2. Insert the EZ Card into the slot located below the vertical keypad.
 - The EZ Card can be inserted forwards or backwards.
3. Press and hold the Program Save pad for 3 seconds.
 - AUTO, then PROG displays briefly, repeating this sequence every second as the EZ Card automatically programs the oven.
 - When the oven programming is complete, DONE shows in the display for 3 seconds and the oven beeps.
 - The oven resets to the standby mode.
4. Remove the EZ Card.
 - The oven programming is now complete.
5. Place plug cover back over slot in bottom of control panel.

Caution:

DO NOT REMOVE EZ Card while programming. Removing card during programming can cause the oven's keypad to freeze up.

Note: Use this option only to transfer data from the oven TO the EZ Card. **This will overwrite all programming on the EZ Card!**

To transfer programming from the oven to the EZ Card:

Oven must be in Standby mode (Preheat must be OFF)

1. Remove protective cover from bottom of vertical keypad.
2. Insert the EZ Card into the slot located below the vertical keypad.
 - The EZ Card can be inserted forwards or backwards.
3. Press the Program Save pad.
4. Press the START pad.
5. Press the 1 pad, the 3 pad, and then the 5 pad.
 - The programming transfer will begin automatically and the display will show moving dashes.
 - When the programming transfer is complete, **DONE** shows in the display for 3 seconds and the oven beeps.
 - The oven resets to the standby mode.
6. Remove the EZ Card.
 - The programming transfer is now complete.
7. Place protective cover back over slot in bottom of control panel.