

# INSTRUCTION SHEET

16200052

- Description:** Left Hinge Kit # 14090026
- Contents:**
- 1 – Left Hinge Assembly
  - 1 – Glide Strip
  - 2 – Pop Rivets
  - 2 – Nylon Washers
  - 2 – Screws (Hinge Arm to Outer Door)
  - 1 – 16200052 Instruction Sheet

## Procedure:

1. Unplug or disconnect power to the oven.
2. Remove left side panel and oven top panel.
3. Remove hinge and door mounting screws as shown in figure 1.

**Note:** Discard the two old door to hinge mounting screws.

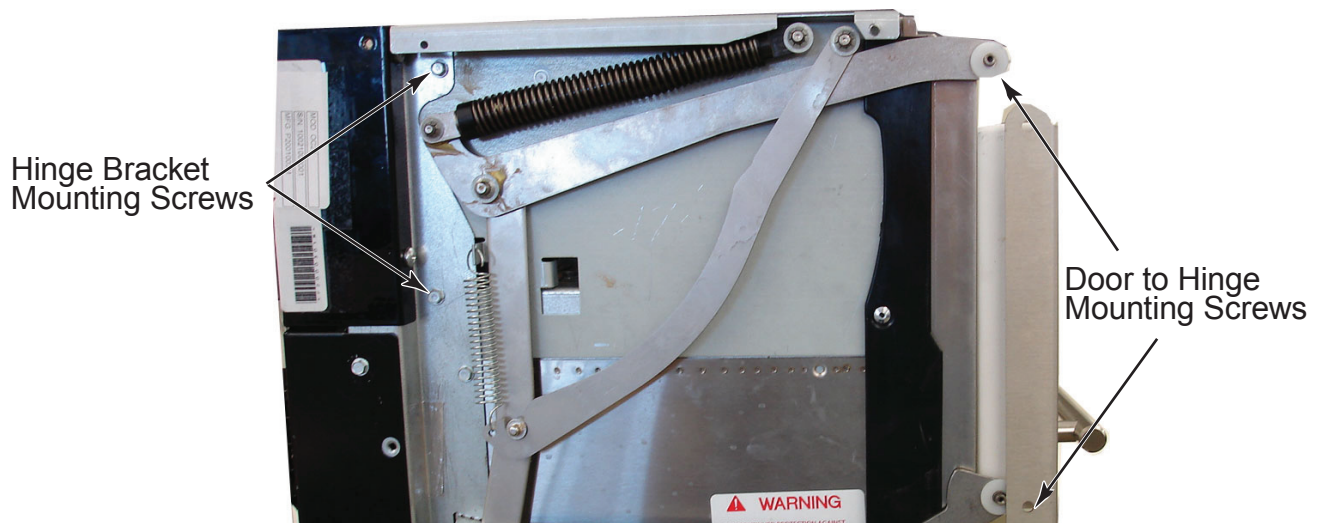


Figure 1

4. Disconnect the diodes from the capacitors and remove wires from harness clip as shown in figure 2.



Figure 2

5. Remove two hinge mounting screws from the front of the oven as shown in figure 3.



Figure 3

6. Detach hinge arms from the door assembly as shown in figure 4

**Note:** Discard the old nylon washers.

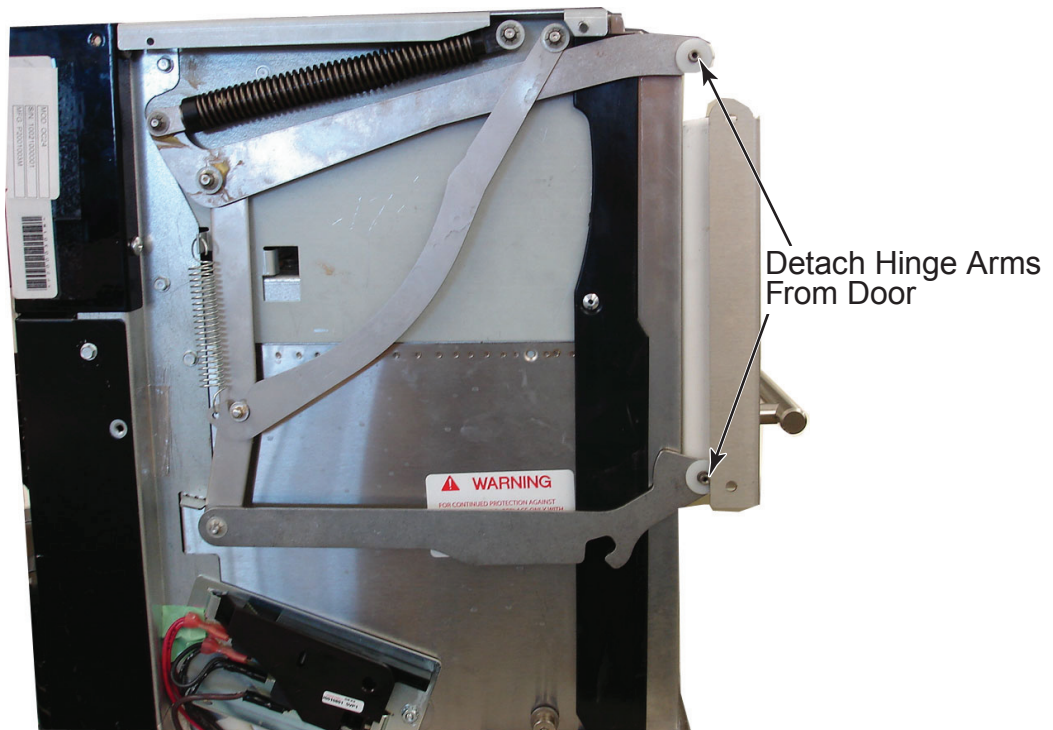


Figure 4

7. Remove the glide strip mounting screw as shown in figure 5.

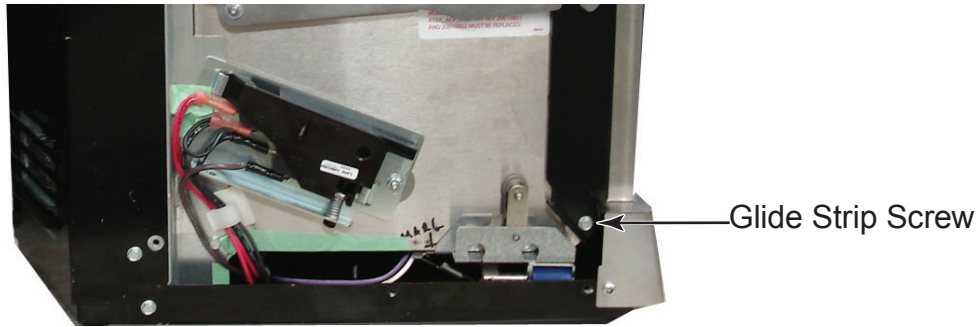


Figure 5

8. Lift hinge assembly from oven.
9. Remove diodes from old hinge mounting plate and transfer to new hinge mounting plate.
10. Position new hinge assembly onto the oven and install the mounting screws.
11. Position new glide strip onto the oven and install glide strip screw.
12. Secure glide strip using two pop rivets supplied in kit as shown in figure 6.

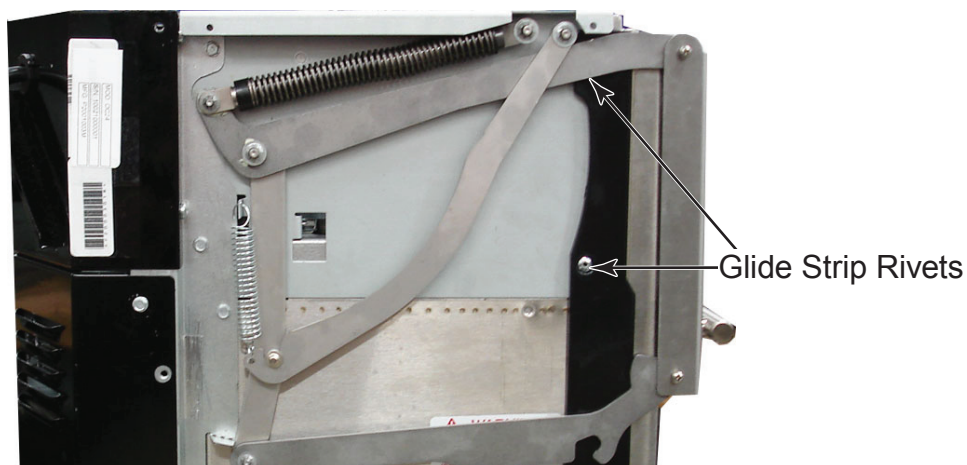


Figure 6

13. Position new nylon washers on hinge arm studs.
14. Align hinge arm studs with holes in outer door.
15. Secure hinge arms to outer door with two screws supplied in kit.
16. Reassemble panels and test for proper operation.