


INSTRUCTION SHEET

16200041


Description: Touch Panel Assembly # 59004094
Contents: 1 – 59004094 Touch Panel Assembly
1 – 16200041 Instruction Sheet

1. Unplug or disconnect power to the oven.
2. Remove two screws securing touch panel assembly to oven frame.


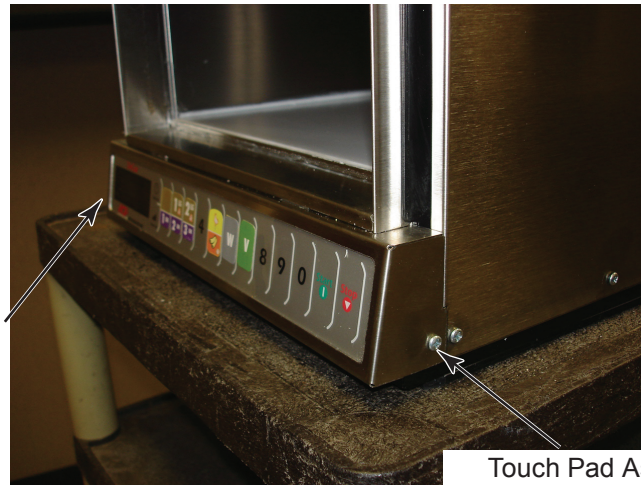


Touch Pad Assembly
(2 Screws)

3. Rotate bottom out to release upper tabs from oven frame to expose ribbon connector. Remove clip or cut wire tie on early production oven.
4. Unplug ribbon connector from display board and remove touch panel assembly.

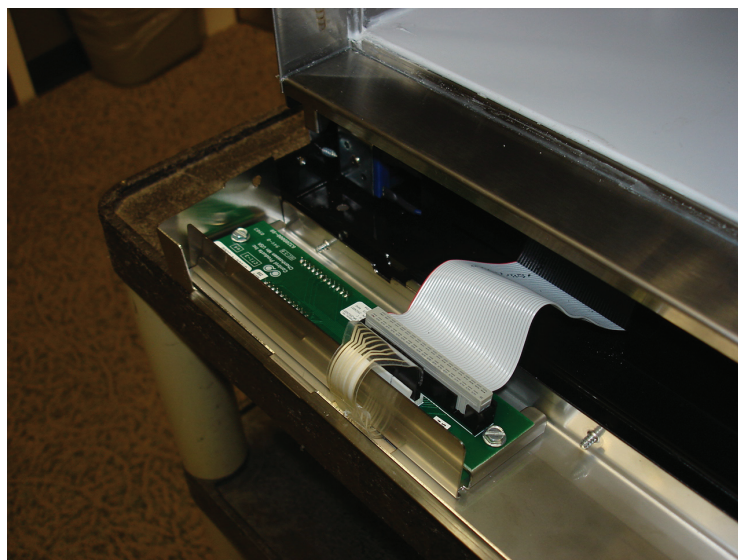

5. Plug ribbon connector into new touch panel assembly.

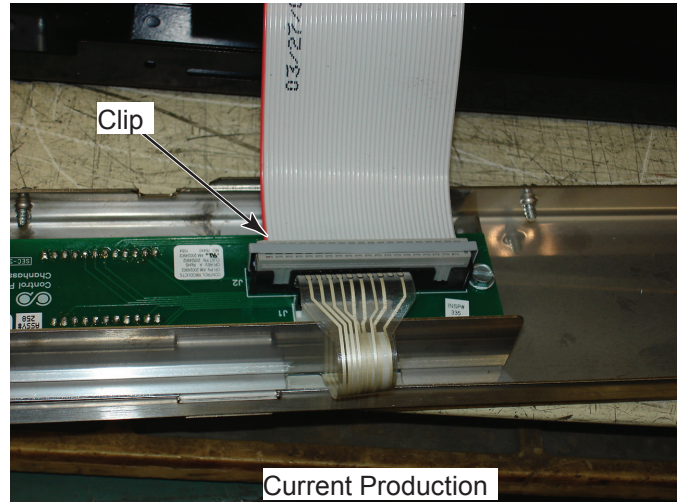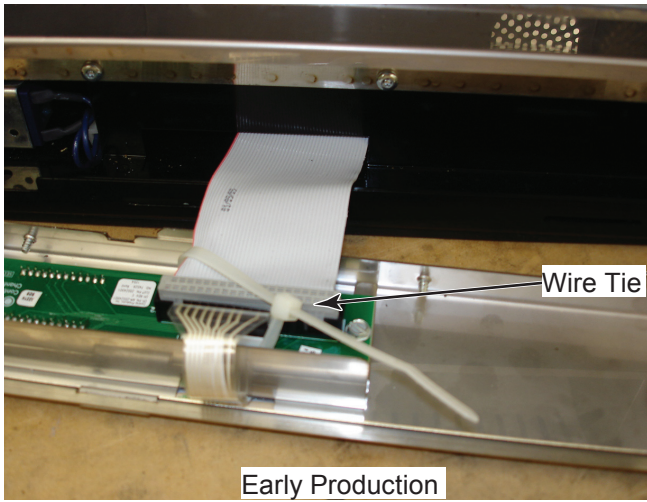

6. Reinstall touch panel assembly and outer covers.

Note: When installing touch panel assembly.

- a. Install tab at top of panel.
- b. Install tabs at bottom. It may be necessary to push upward on bottom of panel to align bottom tabs.

7. Test for proper operation.