


INSTRUCTION SHEET


16200040

Description: Harness Kit # 14090028
Contents: 1 – Harness
1 – Bracket
1 –16200040 Instruction Sheet

1. Unplug or disconnect power to the oven.
2. Remove outer top panel.

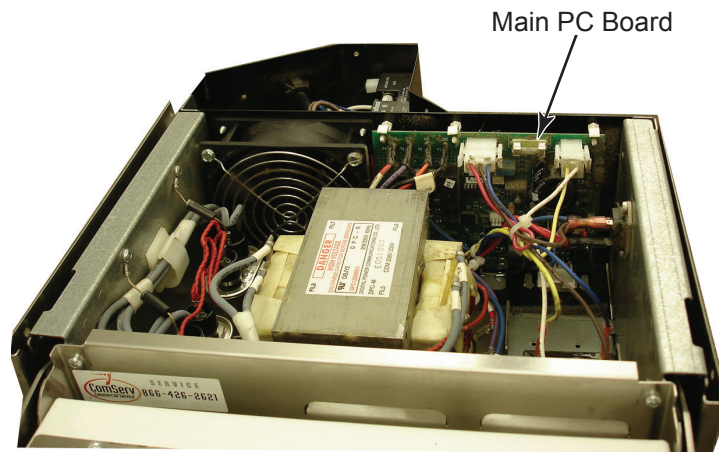


3. Remove back lower panel of outer case to expose harness.

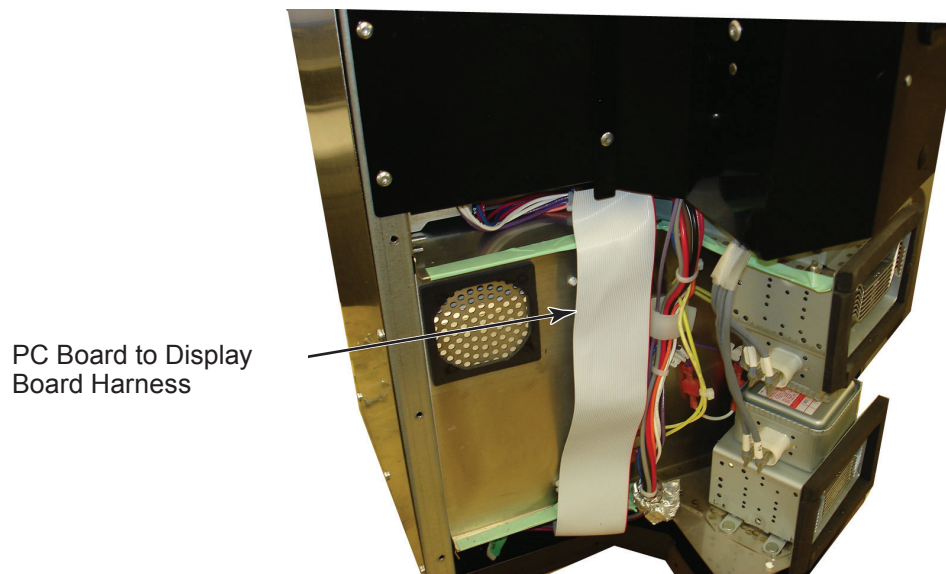


4. Disconnect wires from cavity exhaust motor and cavity thermal protector.

5. Remove two screws from sides of touch panel assembly and slide assembly away from oven to expose harness.

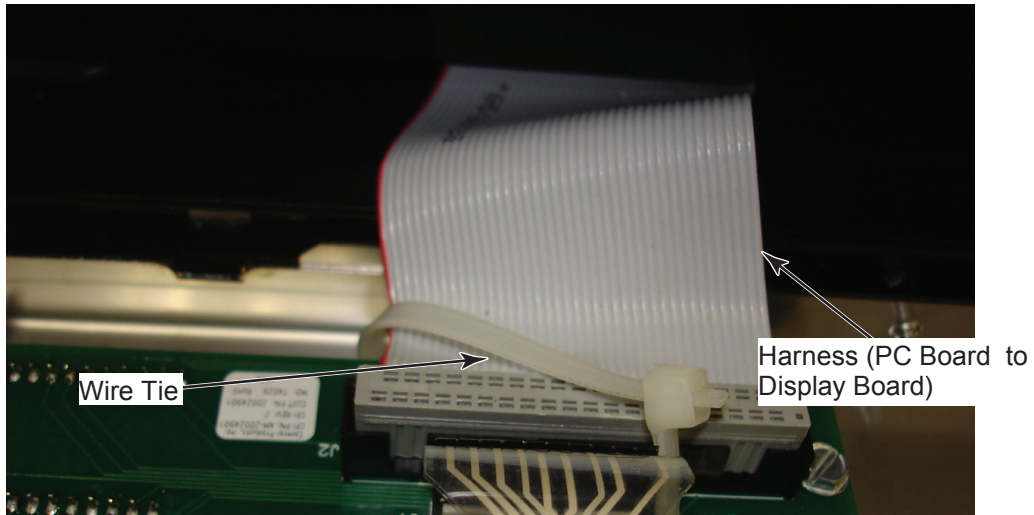


6. Remove clip or cut wire tie on early production oven and disconnect harness connector from touch panel assembly.



Note: Harness connector attached to display board is a very tight fit

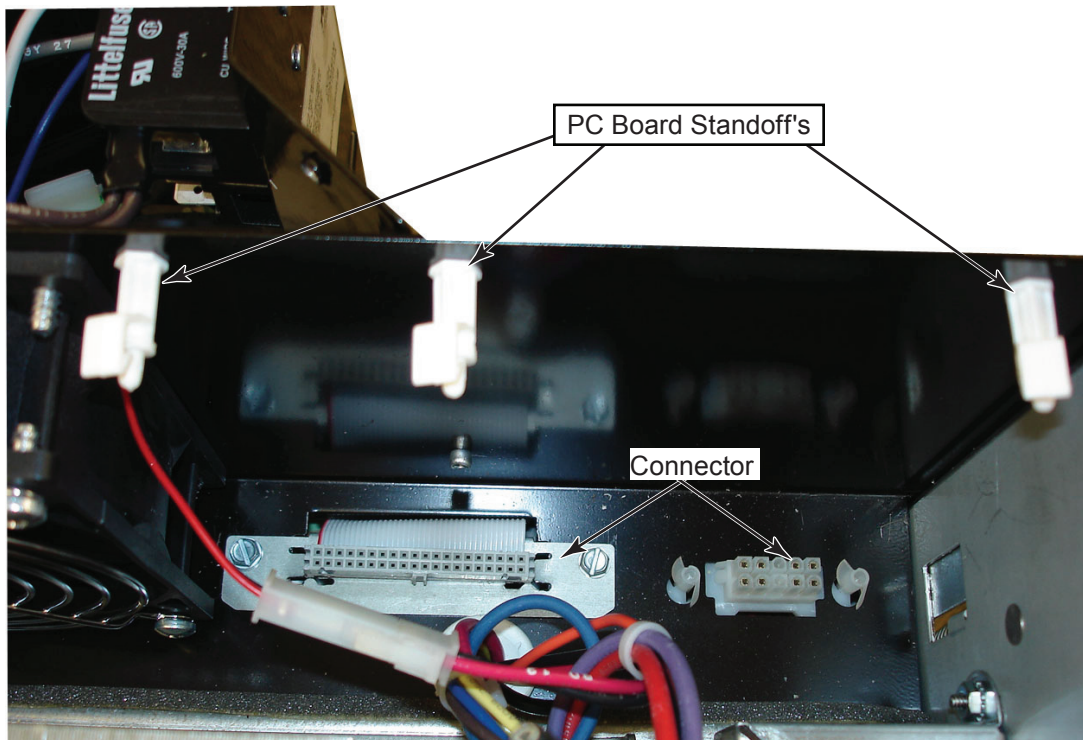

7. Locate main pc board. Disconnect two wire connectors and four spade connectors from terminals T1 thru T4.
8. Release three pc board standoff's.
9. Carefully lift and if necessary rock pc board side to side while lifting off of two connectors to remove.

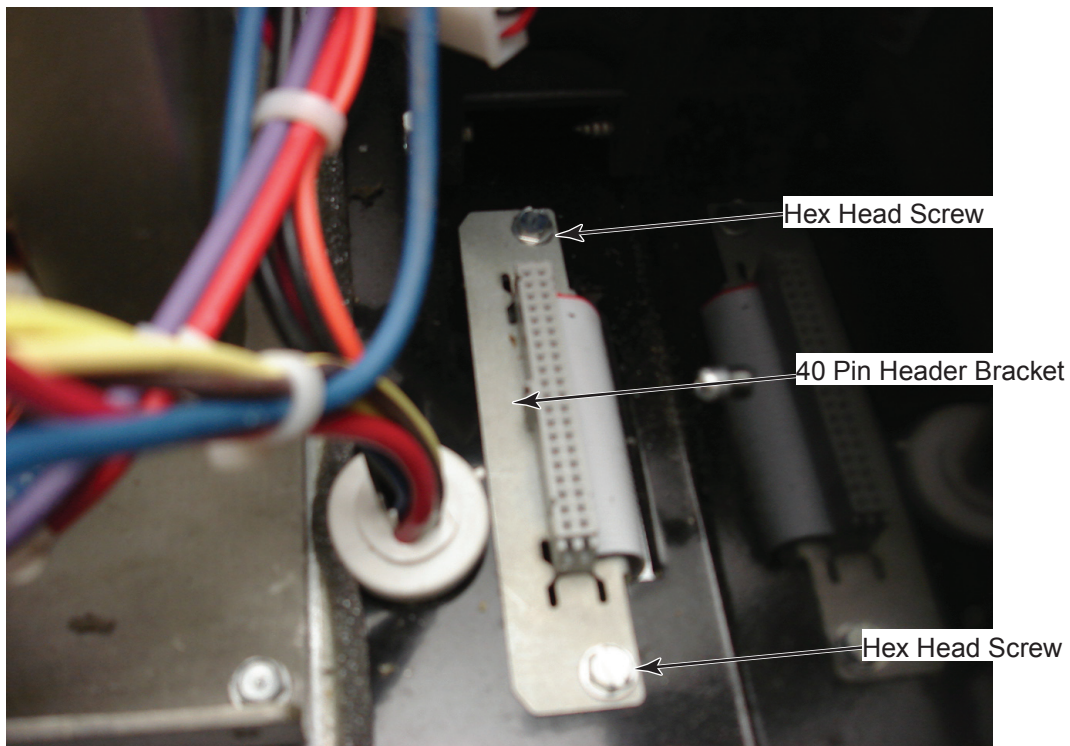

10. Remove two hex screws to remove 40 pin header bracket.
11. Pull harness, 40 pin header connector and bracket out from the top of the unit.
12. When installing new harness from kit, feed harness display board end through top of unit, then under lower antenna motor, then through opening slot in front and attach to display board. Install clip or wire tie diagonally on early production ovens around harness connector as shown below and cut off excess wire tie.
13. Slide harness header bracket into slot. Reinstall two screws holding bracket to oven frame
14. Reinstall main pc board and reconnect wires and connectors to board.
15. Reinstall touch panel assembly and outer covers.

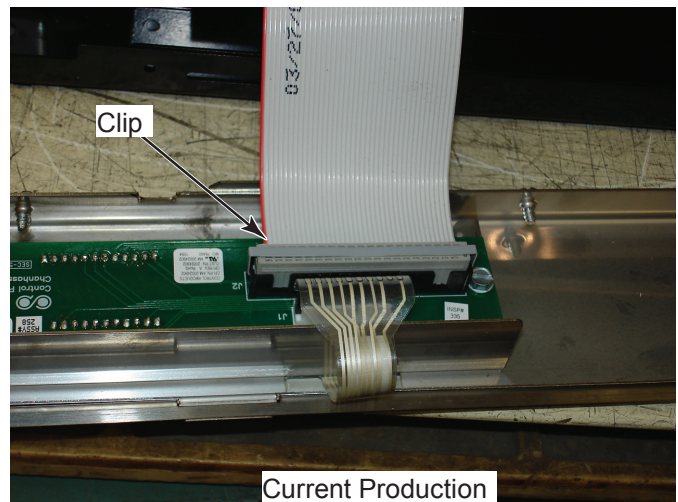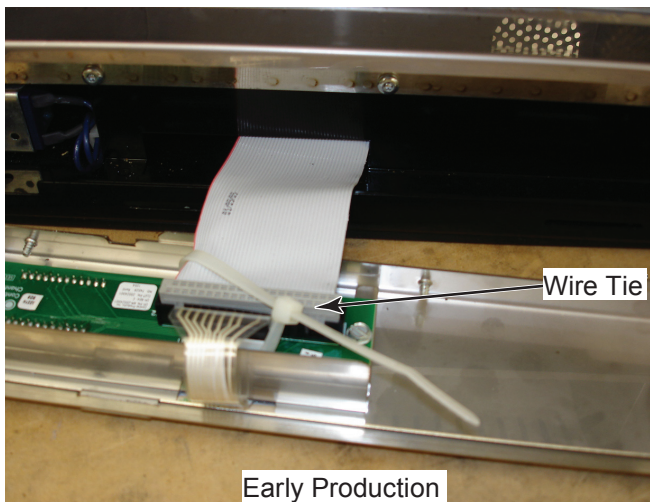

16. Test for proper operation.