

Instruction Sheet


16021916

Description: Standardization Instructions for HV/LV Board Kit R0131381 for use on the following models:

HDC18	P1323013M	Direct replacement
HDC18SD	P1323014M	Direct replacement
HDC21	P1323016M	Direct replacement
CRC18T2OG	P1323015M	Requires reprogramming- see instructions below
CRC21T2RL	P1323017M	Requires reprogramming- see instructions below
HDC21RB	P1323019M	Requires reprogramming- see instructions below

Repair Part Number: R0131381

Kit includes:

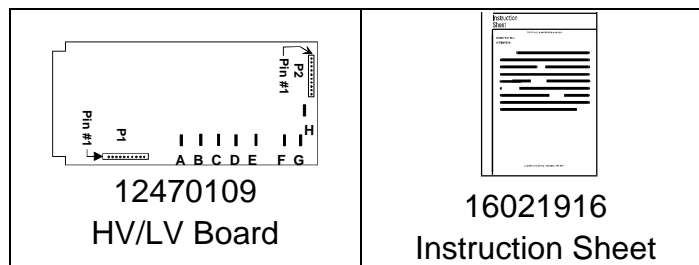

Procedure:

Instructions for reprogramming COOK TIMES on the models shown below:

1. Open the door.
2. Press and hold pad "1" for five seconds. "P:0-" appears.
3. Press the desired pad.
4. Enter the desired cooking time.
5. If power level other than 100% is required, press "Power Level" pad, then press a numbered pad to enter the desired power level.
6. Press "Start" to save the program.
7. Press "Stop/ Reset" or close door to exit programming mode.

CRC18T2OG – P1323015M

Pad	Time	Power
1	0:30	100%
2	0:45	100%
3	1:00	100%
4	1:15	100%
5	1:30	100%
6	1:45	100%
7	2:00	100%
8	2:15	100%
9	2:30	100%
0	2:45	100%

CRC21T2RL – P1323017M

Pad	Time	Power
1	0:10	100%
2	0:30	100%
3	0:35	100%
4	0:40	100%
5	0:45	100%
6	0:55	100%
7	1:15	100%
8	1:30	100%
9	1:45	100%
0	2:10	100%

HDC21RB – P1323019M

Pad	Time	Power
1	0:07	100%
2	0:12	100%
3	0:20	100%
4	0:25	100%
5	0:30	100%
6	0:35	100%
7	0:40	100%
8	0:50	100%
9	1:00	100%
0	0	100%