

# Instruction Sheet


16021919

**Description: Standardization Instructions for HV/LV Board Kit R0131389 for use on the following models:**

HDC10	P1323008M	Direct Replacement
HDC12	P1323009M	Direct Replacement
HDC12A	P1323002M	Direct Replacement
HDC12A	P1323012M	Direct Replacement
AEC2000	P1323018M	Requires reprogramming- see instructions A & B below

**Repair Part Number: R0131389**

**Kit includes:**

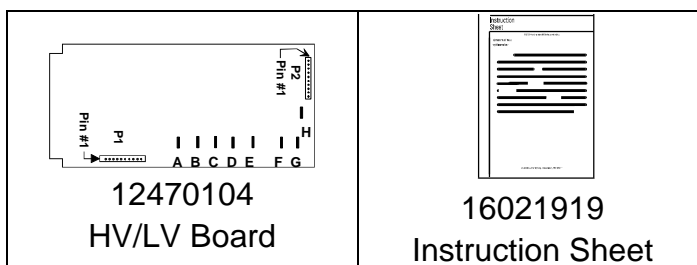

## **Procedure:**

### **A. Instructions for reprogramming USER OPTIONS on AEC2000:**

1. Open the door.
2. Press and hold pad "2" for five seconds. "OP:--" appears.
3. Press each pad to view option setting.
4. If setting does not match the chart below, press the pad again to change setting.
5. Press "Start" to save the setting.
6. Press "Stop/ Reset" or close door to exit programming mode.

## **USER OPTIONS**

<b>OP:10</b>	3 Second Beep
<b>OP:21</b>	Low Beeper Volume
<b>OP:31</b>	Keybeep On
<b>OP:42</b>	60 Second Keyboard Window
<b>OP:51</b>	On-the-fly Enabled
<b>OP:60</b>	Reset on Door Open Disabled
<b>OP:70</b>	Max Cook Time 60 Minutes
<b>OP:81</b>	Time Entry Enabled
<b>OP:90</b>	Double Digit Entry Disabled

## **B. Instructions for reprogramming COOK TIMES on AEC2000:**

1. Open the door.
2. Press and hold pad "1" for five seconds. "P:0-" appears.
3. Press the desired pad.
4. Enter the desired cooking time.
5. If power level other than 100% is required, press "Power Level" pad, then press a numbered pad to enter the desired power level.
6. Press "Start" to save the program.
7. Press "Stop/ Reset" or close door to exit programming mode.

## **COOK TIMES**

### **AEC2000 – P1323018M**

<b>Pad</b>	<b>Time</b>	<b>Power</b>
1	2:20	100%
2	0:55	100%
3	4:30	100%
4	6:15	100%
5	1:00	100%
6	3:10	100%
7	1:20	100%
8	3:00	0%
9	1:00	100%
0	1:00	30%
	1:00	100%