

INSTRUCTION SHEET

16200122

Description: This instruction is for CRC21T2RLPF model ONLY

Contents: 1 – 59114154 – HV / LV Board
1 – 16200122 – Instruction Sheet

1. Unplug oven.
2. Install HV / LV Board.
3. Disconnect the USB harness from HV / LV board.
4. Plug oven in and verify new board works as intended.
5. Plug USB harness onto HV / LV board.
6. Press and hold Pad 4 for 5 seconds to access Chassis mode (Display will show Chassis).
7. Press pad 0 for 10 seconds until the oven resets.
8. Verify oven works as intended.

NOTE: This procedure must be followed when the HV / LV board is replaced.

ACP, Inc.
225 – 49TH Avenue Drive SW
Cedar Rapids, IA 52404

REV. 0
DATE: 12-4-12
PART #: 16200122
Page 1 OF 1

INSTRUCTION SHEET

16200122

Description: This instruction is for CRC21T2RLPF model ONLY

Contents: 1 – 59114154 – HV / LV Board
1 – 16200122 – Instruction Sheet

1. Unplug oven.
2. Install HV / LV Board.
3. Disconnect the USB harness from HV / LV board.
4. Plug oven in and verify new board works as intended.
5. Plug USB harness onto HV / LV board.
6. Press and hold Pad 4 for 5 seconds to access Chassis mode (Display will show Chassis).
7. Press pad 0 for 10 seconds until the oven resets.
8. Verify oven works as intended.

NOTE: This procedure must be followed when the HV / LV board is replaced.

ACP, Inc.
225 – 49TH Avenue Drive SW
Cedar Rapids, IA 52404

REV. 0
DATE: 12-4-12
PART #: 16200122
Page 1 OF 1