

INSTRUCTION SHEET

16200079

Description: Magnetron Kit # 14114048

Contents:

- 1 – Magnetron
- 1 – B8330601 Heat Sink Plate
- 2 – M0229916 Screws
- 1 – 16200079 Instruction Sheet

Procedure:

Notice: When installing this kit on the following models, it will be necessary to install the enclosed heat sink per the instructions below.

ALD10D	P1331001M	ALD10T	P1331018M
ALD10D	P1331011M	MCS10DS	P2001104M
ALD10D	P1331019M	MCS10TS	P2001103M
ALD10DT	P1331001M	RCS10DS	P2001102M
ALD10T	P1331002M	RCS10TS	P2001101M

This is a direct replacement for all other models.

This kit adds a heat sink plate behind existing magnetron thermal cutout (TCO), two longer screws are included to attach TCO heat sink to the new magnetron.

1. Remove two screws from existing magnetron TCO and discard screws (Figure 1).
2. Disconnect wiring from existing magnetron.
3. Remove 4 mounting screws securing magnetron and remove magnetron.
4. Install new magnetron from kit.
5. Install heat sink behind existing magnetron TCO with screws included in kit to new magnetron (Figure 2).
6. Connect wiring to new magnetron and test for proper operation.

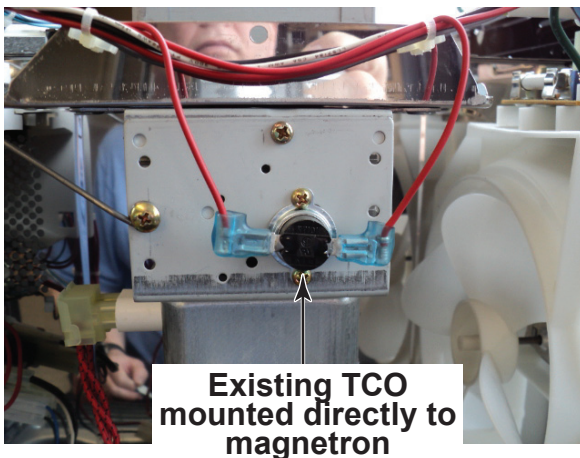


Figure 1

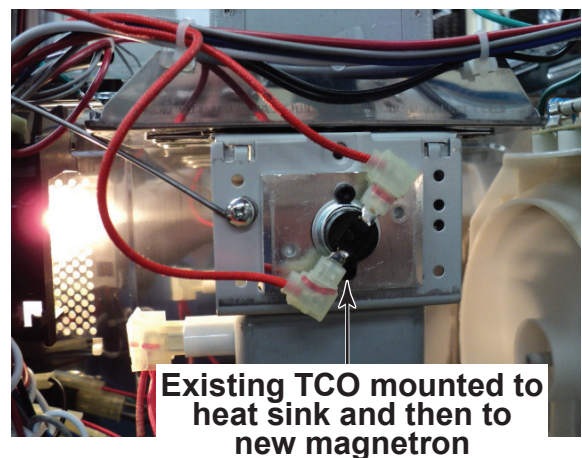


Figure 2