

# INSTRUCTION SHEET


16200057

Description: Ceramic Tray & Sealer Kit # 14090024

Contents: 1 – Ceramic Tray  
1 – RTV Sealant  
1 – RTV Scraper  
1 – 16200057 Instruction Sheet

## Procedure:


1. Unplug or disconnect power to the oven.
2. Cut RTV sealant around outside edge of ceramic tray (Figure 1).
3. Carefully lift tray and cut RTV sealant separating ceramic tray from tray support.

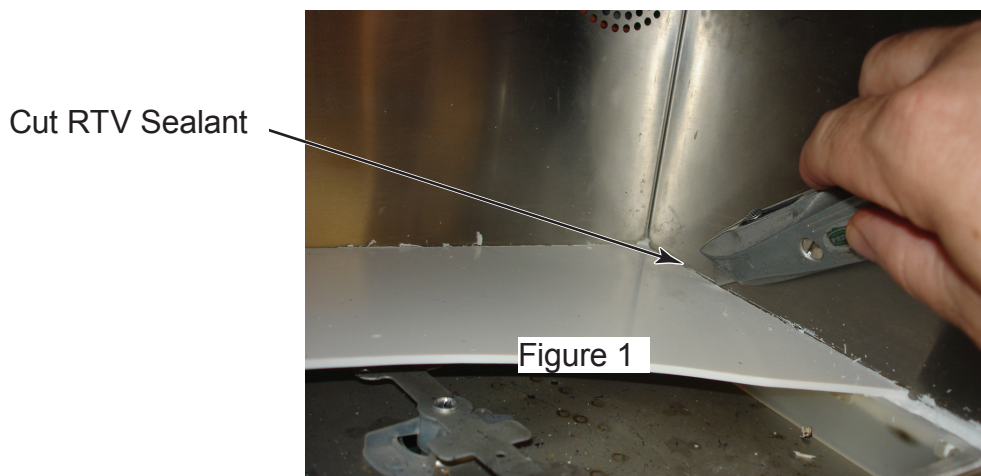

4. Remove ceramic tray from tray support.
5. Clean and remove all RTV sealant from tray support and side of oven cavity (Figure 2).



6. Apply a generous bead of RTV sealant to the all four top edges of tray support (Figure 3).

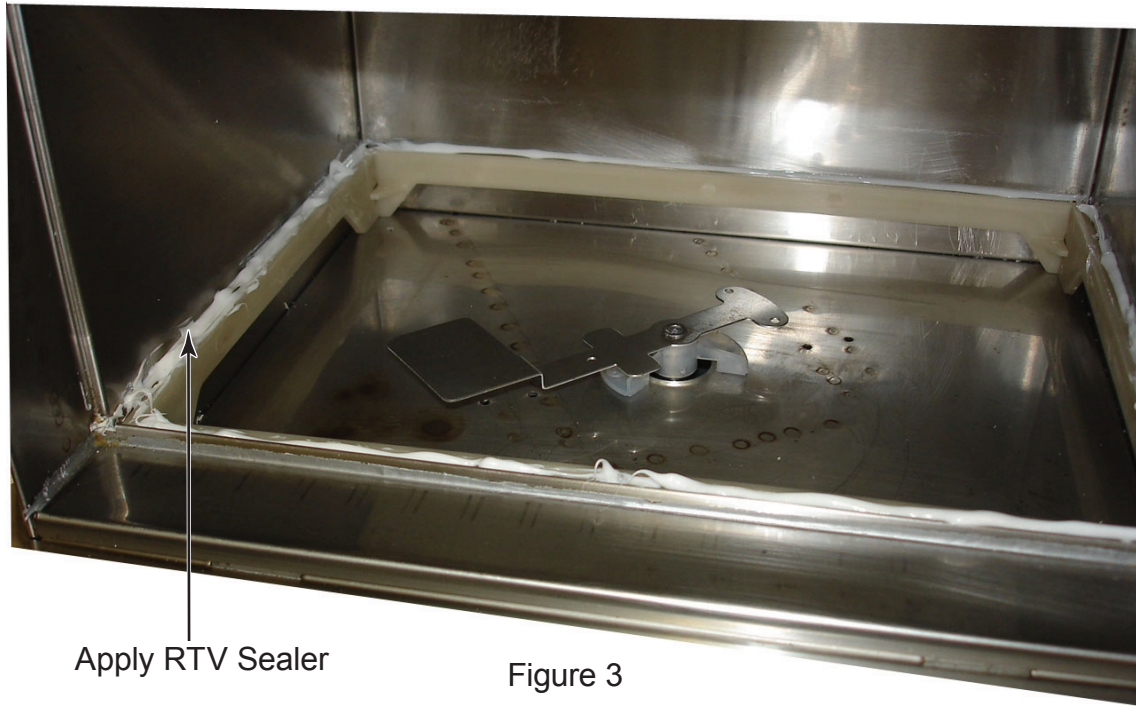

7. Center ceramic tray on tray support (Figure 4).

8. Apply a bead of RTV sealant to outside edge of ceramic tray to oven cavity (Figure 5).

9. Using a spray bottle filled with water spray a fine mist of water over the RTV sealant, cavity and edge of ceramic tray.

**Note:** This will prevent RTV sealant from adhering to the ceramic tray and cavity wall in unwanted areas creating a clean finished edge in step 10.

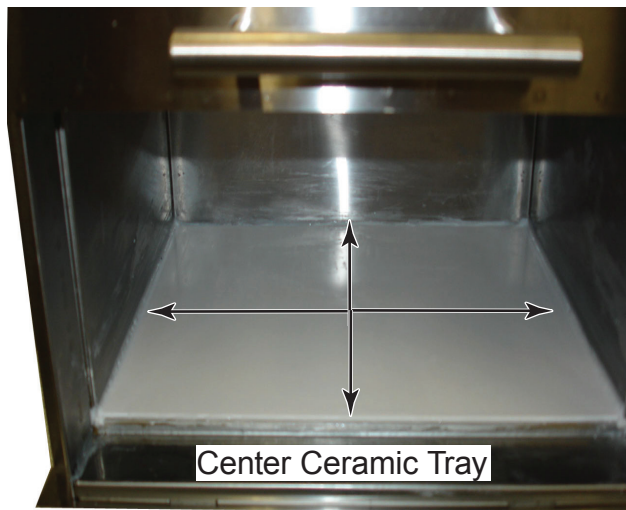


Figure 4

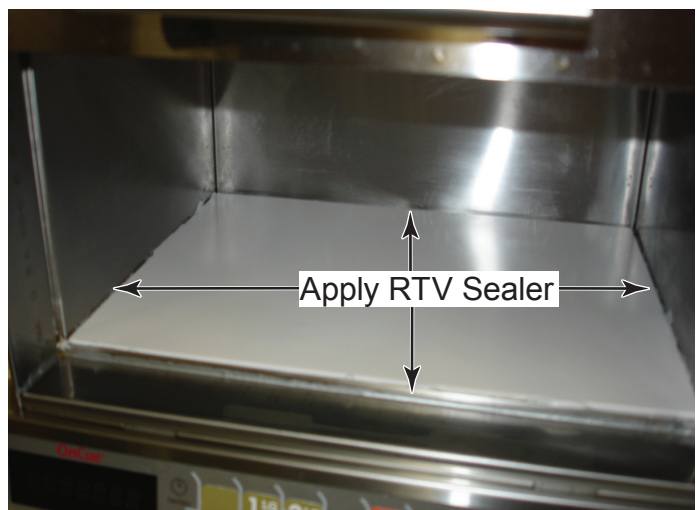


Figure 5

10. Using RTV scraper wipe off excess RTV sealant to create a finished edge.

11. Allow adequate time for curing the RTV sealant before using oven.