

Commercial Microwave—Technical Information

230V, 50 Hz Models

RMS510T P2001205M
RMS510D P2001204M

RMS510TS P2001206M
CRMS510TS P2001214M

Due to possibility of personal injury or property damage, always contact an authorized technician for servicing or repair of this unit.

- Refer to Service Manual for installation, operating, testing, troubleshooting, and disassembly instruction.



CAUTION

All safety information must be followed as provided in Service Manual.



WARNING


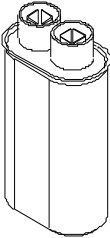
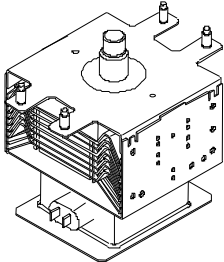
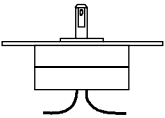
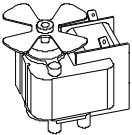

To avoid the risk of electrical shock, personal injury or death, disconnect power to oven and discharge capacitor before servicing, unless testing requires power.

| Models | RMS510D / RMS510T* /CRMS510TS |
|---|--|
| Power Source | |
| Voltage AC | 230 VAC |
| Amperage (Single Unit) | 15 A |
| Frequency | 50 Hz |
| Single Phase, 3 wire grounded | X |
| Receptacle | CEE 7/7 Schuko |
| Plug | CEE 7/7 Schuko |
| Power Output | |
| Nominal microwave energy (IEC705) | 1000 Watts |
| Minimum temperature rise (ΔT) | 10° F / 5° C |
| Operating Frequency | 2450 MHz |
| Power Consumption | |
| Cook Condition Microwave | 1150 Watts |
| Dimensions | |
| Cabinet | |
| Width | 508 (20") |
| Height | 311 (12 1/4") |
| Depth | 419 (16 1/2") |
| Oven Interior | |
| Width | 330.2 (13") |
| Height | 197 (7 3/4") |
| Depth | 330.2 (13") |
| Weight | |
| Crated | 14.5 kg. (39 lbs.) |
| Uncrated | 17.7 kg. (32 lbs.) |

Component Testing Procedures

⚠ WARNING

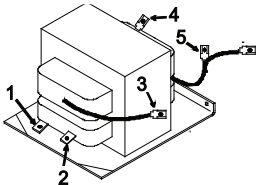
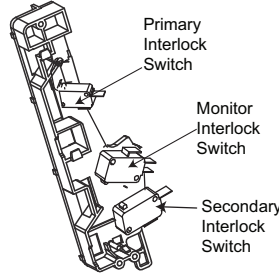
To avoid risk of electrical shock, personal injury or death, disconnect power to oven and discharge capacitor before servicing, unless testing requires power.

| Illustration | Component | Test | Results |
|---|------------------------------|---|---|
|  | Thermal Cutout | Disconnect all wires from TCO. Measure resistance across terminals. Cavity Thermal Fuse..... Magnetron TCO..... | Open at 230° F (110° C). Open at 320° F (160° C). |
| | Diode Assembly | Discharge Capacitor Remove diode lead from capacitor and connect ohmmeter. Reverse leads for second test. | Infinite resistance should be measured in one direction and 50KΩ or more in the opposite direction. NOTE: Test meter must contain a battery of 6 volts minimum. |
|  | Capacitor | Discharge Capacitor Remove wires from capacitor terminals and connect ohmmeter, set on highest resistance scale to terminals. Also check between each terminal and capacitor case. | Between Terminals: Meter should momentarily deflect towards zero then return to over 5 MΩ. If no deflection occurs, or if continuous deflection occurs, replace capacitor. Terminal to Case: Infinite resistance. |
|  | Magnetron | Discharge Capacitors Remove wires from magnetron and connect ohmmeter to terminals. Also check between each terminal and ground. | Between Terminals: Less than 1 Ω. Each terminal to ground measures Infinite resistance. NOTE: This test is not conclusive. If oven does not heat and all other components test good replace the magnetron and retest. |
|  | Stirrer Motor | Remove all wires from terminals. Measure resistance from: terminal to terminal..... | Approximately 10 KΩ. |
|  | Blower Motor | Remove all wires from motor. Measure resistance from terminal to terminal..... | Approximately 435 Ω. |
|  | Fuse block / Filter assembly | Power In terminals Power Out terminals | 230 VAC 230 VAC If no power in, check power outlet If no power out, check fuses |

Component Testing Procedures

⚠ WARNING

To avoid risk of electrical shock, personal injury or death, disconnect power to oven and discharge capacitor before servicing, unless testing requires power.

| Illustration | Component | Test | Results |
|--|---------------------------|---|---|
|  <p>Terminal 1 – 230 V Terminal 2 – Common</p> | Transformer | <p>Discharge Capacitors Remove all wires from terminals. Measure resistance from:</p> <p>Terminal 1 to Terminal 2..... Terminal 1 to Wire 3..... Wire 3 to Wire 5..... Terminal 4 to Ground screw on transformer ... Terminal 4 to any other terminal.....</p> | <p>2.0 Ω. Infinite. Less than 1 Ω. 160-170 Ω. Infinite resistance. If not, replace transformer.</p> |
|  <p>Primary Interlock Switch Monitor Interlock Switch Secondary Interlock Switch</p> | Interlock switch assembly | <p>Disconnect wires to switch.</p> <p>With door open measure resistance from:</p> <p>Terminal C to NC Monitor..... Terminal C to NO Primary / Logic..... Terminal C to NO Secondary.....</p> <p>With door closed measure resistance from:</p> <p>Terminal C to NC Monitor..... Terminal C to NO Primary / Logic..... Terminal C to NO Secondary.....</p> <p style="text-align: center;">Door Closed</p> <p>Primary / Logic C —●—●— NO Monitor C —●—●— NC Secondary C —●—●— NO</p> | <p>Continuity. Infinite. Infinite. Infinite. Continuity. Continuity.</p> |
| Wire Harness | | Test continuity of wires | Continuity. |

Component Testing Procedures



WARNING

To avoid risk of electrical shock, personal injury or death, disconnect power to oven and discharge capacitor before servicing, unless testing requires power.

All Amana and Menumaster microwave oven power outputs are rated using the IEC705 standards. Using the IEC705 test method requires precision measurements and equipment that is not practical to be performed in the field. Using the test shown below will indicate if the oven performance is satisfactory.

Test equipment required:

- 1000 ml test container and thermometer.
- Digital watch / watch with a second hand for use on ovens with electromechanical timers.

Important Notes:

- Low line voltage will cause low temperature rise / power output.
- Ovens must be on a dedicated circuit, properly grounded, and polarized. Other equipment on the same circuit may cause a low temperature rise / power output.
- This test and results are not a true IEC705 test procedure and are only intended to provide servicers with an easy means of determining if the microwave oven cooking output is correct.

Procedure

1. Fill the test container to the 1000 ml line with cool tap water.

NOTE: Water temperature should be approximately 60°F / 16°C.

2. Using the thermometer, stir water for five to ten seconds; measure, and record the temperature (T1).
3. Place test container of water in the center of oven cavity and close door.
4. Heat the water for a 33-second full power cycle.

NOTE: Use a digital watch or a watch with a second hand for ovens with electromechanical timers.

5. At end of the cycle, remove test container. Using the thermometer, stir water for five to ten seconds and record temperature (T2).
6. Subtract the starting water temperature (T1), from the ending water temperature (T2) to obtain the temperature rise (ΔT).
7. If the temperature rise (ΔT) meets or exceeds the minimum, the test is complete. If the temperature rise (ΔT) fails to meet the minimum temperature rise, test the line voltage to verify it is correct. Then repeat steps 1 - 6 making sure to change the water. If the temperature rise (ΔT) fails to meet the minimum temperature rise again the oven will require service.

Minimum Temperature Rise at Thirty -Three (33) Seconds Run Time

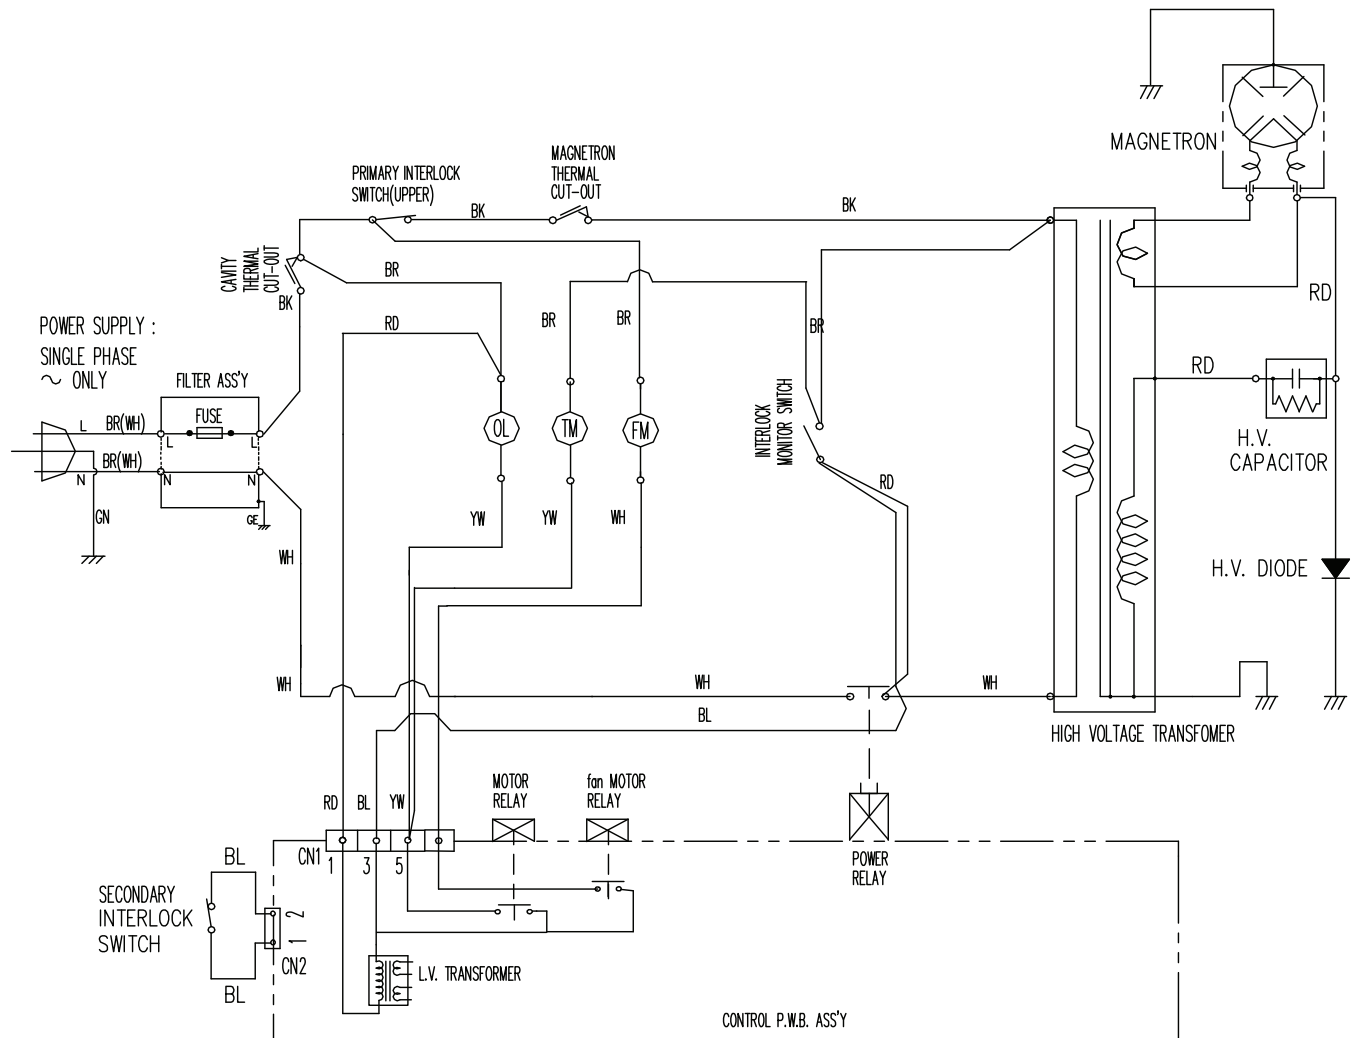
| ΔT (°F) | Cooking Power Output | ΔT (°F) | Cooking Power Output | ΔT (°C) | Cooking Power Output | ΔT (°C) | Cooking Power Output |
|--------------------|-------------------------|--------------------|-------------------------|--------------------|-------------------------|--------------------|-------------------------|
| 10..... | 1000 | 20..... | 2000 | 5..... | 1000 | 11..... | 2000 |
| 11..... | 1100 | 21..... | 2100 | 5.5..... | 1100 | 11.5..... | 2100 |
| 12..... | 1200 | 22..... | 2200 | 6.5..... | 1200 | 12..... | 2200 |
| 14..... | 1400 | 24..... | 2400 | 7.5..... | 1400 | 13..... | 2400 |
| 17..... | 1700 | 25..... | 2500 | 9.5..... | 1700 | 13.5..... | 2500 |
| 18..... | 1800 | 27..... | 2700 | 10..... | 1800 | 15..... | 2700 |
| 19..... | 1900 | 30..... | 3000 | 10.5..... | 1900 | 16.5..... | 3000 |

Wiring and Schematic Diagrams



WARNING

To avoid risk of electrical shock, personal injury or death, disconnect power to oven and discharge capacitor before servicing, unless testing requires power.



[CONDITION]
 DOOR : CLOSED
 COOK : OFF

NOTE :
 : OVEN LAMP
 : FAN MOTOR
 : TRAY MOTOR

BK : BLACK
 RD : RED
 WH : WHITE
 YW : YELLOW

BL : BLUE
 BR : BROWN
 GN : GREEN
 GE : YELLOW/GREEN



DANGER