

INSTRUCTION SHEET

16200058

Description: Ceramic Tray, Tray Support & Sealer Kit # 14109040

Contents:

- 1 – Ceramic Tray
- 1 – Tray Support Assembly
- 1 – RTV Sealant
- 1 – RTV Scraper
- 1 – 16200058 Instruction Sheet

Procedure:

1. Unplug or disconnect power to the oven.
2. Cut RTV sealant around outside edge of ceramic tray (Figure 1).
3. Carefully lift tray and cut RTV sealant separating ceramic tray from oven cavity.

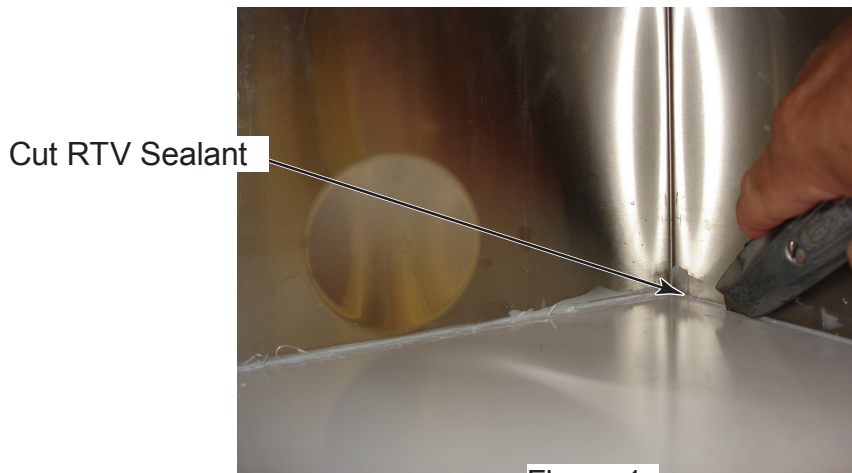


Figure 1

4. Remove ceramic tray.
5. Remove old tray supports from back wall of oven cavity (Figure 2).

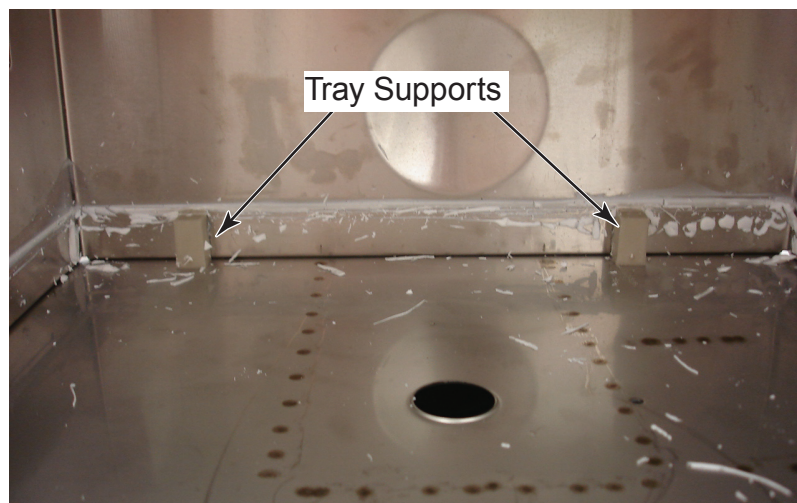


Figure 2

6. Clean and remove all RTV sealant from oven cavity surface.
7. Install oven support from kit (Figure 3).



Figure 3

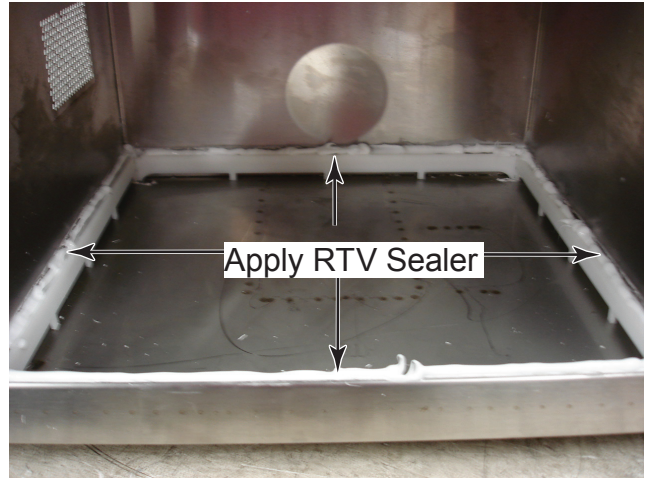


Figure 4

8. Apply a **generous** bead of RTV sealant on top of all three sides of the tray support and front lip of cavity (Figure 4)
9. Place ceramic tray onto tray support and center it in the cavity (Figure 5).
10. Apply a bead of RTV sealant to outside edge of ceramic tray to oven cavity (Figure 6).
11. Using a water spray bottle spray a fine mist of water over the RTV sealant, cavity and edge of ceramic tray.

Note: This will prevent RTV sealant from adhering to the ceramic tray and cavity wall in unwanted areas creating a clean finished edge in step 10.

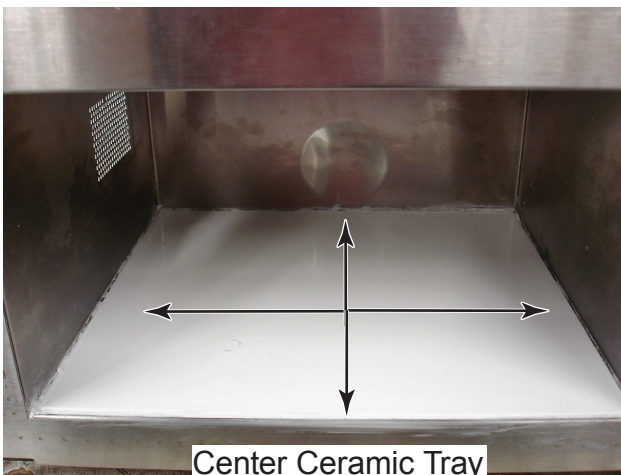


Figure 5

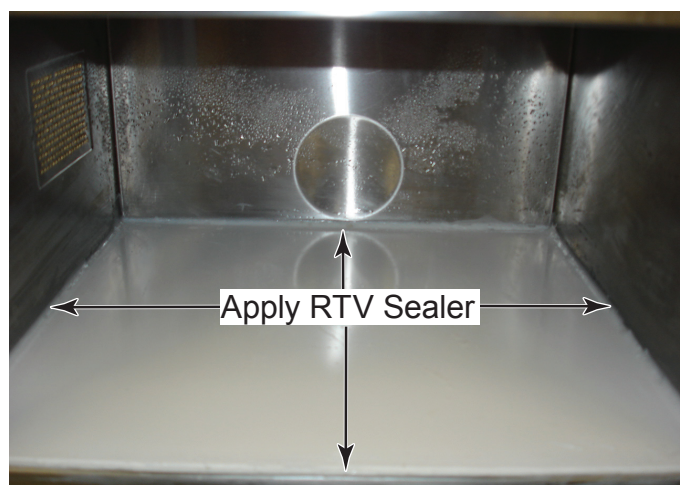


Figure 6

12. Using RTV scraper wipe off excess RTV sealant to create a finished edge.
13. Allow 24 hours for curing the RTV sealant before using oven.